

# Colenta Studioline®


Studioline RA-4 processor

## 37 - 80 RA4 50

for RA4 paper, Display Film and B/W Materials  
Studioline: 50cm/min at 45 sec dev time



All processors with 9 preprogrammable processing cycles, intermediate rinse bath rack system, open stand, daylight feed box and with 2 x 30 ltr. replenisher tanks

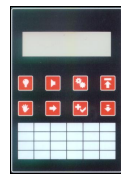

Microprocessor controlled Display


### COLENTA Studioline:

37 RA 50.....	max. 37cm / 14in
56 RA 50.....	max. 56cm / 22in
68 RA 50.....	max. 68cm / 26in
80 RA 50.....	max. 80cm / 32in

**The best in „Low Volume” Tank designs:**  
All Colenta Processors are equipped with precision temperature control of all processing chemistry with automatic Developer Tank cooling to prevent overheating. Replenishment is preheated by injection into the inline chemical heating systems, which are controlled to pre-set programmed temperatures within +/- 0,2 °C.

### TRANSPORT SYSTEM:

Our system of “Non-opposed” hard roller transport modules allow the photographic media to pass smoothly from roller to roller without risk of scratching or direct pressure to their sensitised surfaces.

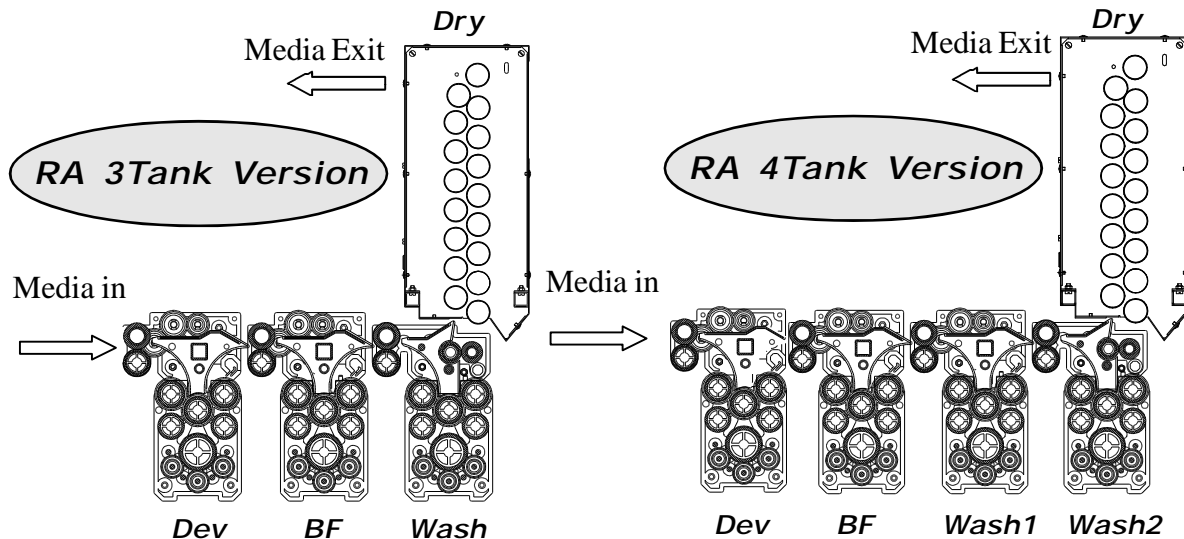

Supplied in 3- and 4-Tank options, 5-Tank 37 & 56 models available on request.



See additional technical Data sheet.

Technical specification subject to change without notice.

COLENTALABORTECHNIK  
Ges.m.b.H. & Co. KG  
Neunkirchner Strasse 117  
A-2700 Wiener Neustadt  
Tel.: +43-2622-28311-0  
Fax: +43-2622-28311-7  
E-mail: [office@colenta.at](mailto:office@colenta.at)  
<http://www.colenta.at>

ACI-COLENTA  
INTERNATIONAL Div.  
Unit 29 Levellers Lane,  
Eynesbury, St. Neots,  
Cambridgeshire, UK. PE19 2JL  
Tel.: +44-1480-211118  
Fax: +44-1480-215236  
E-mail: [aci@patflaherty.com](mailto:aci@patflaherty.com)